

 













 

 





 















 

 







 

 

 

 















Original		Recharge		Original		Recharge	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		OK		OK
	1		1		Right		Right
	2		2		Sat		Shift + 0
	3		3		Down		Down
	4		4		FAV		Fav / Marker / PC
	5		5		TV / Radio		TV/Radio /
	6		6		Guide		Guide / EPG / -/-
	7		7		Freeze		Pause / Step / Freeze
	8		8		Aux In		AV / Input / RDS
	9		9		UHF		Smart / List
	Recall		Back / Return		Red / Audio		Audio / Lang I/II
	0		0		Red / Audio		Red / Netflix / Search
	Info		Info / Angle		Green / Positioner		Green / APP / Repeat
	Menu		Menu / Home		Yellow / Text		Yellow / YouTube / Repeat
	Exit		Exit / Cancel / Clear		Yellow / Text		Text / Goto
	Up		Up		Blue / Audio R/L		Blue / Prime Video / Random





Original

Recharge

Original	Recharge
Blue / Audio R/L	SOUND Sound / Title

Original

Recharge

Original	Recharge

