
 



 


 





 

 

 



 




 




Original	Rechange
 Power	 Power
 Info	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / Zoom	 0
 0 / Zoom	 Eject
 Audio	 Dual
 Mute	 Mute
 Recall	 Back
 FAV	 Pre Ch

Original	Rechange
 Up / CH+	 Up
 Up / CH+	 Ch +
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK	 Ok
 Menu	 Menu
 Exit	 Exit
 Blue / Pause	 Blue
 Blue / Pause	 Pause
 Red / Text	 Red
 Red / Text	 Text
 Multivideo	 Smart
 Yellow / Subtitle	 Yellow






 

 



 




 










 









 

 







 

 

 


 
 


 
 

 
 
 


 





Original		Rechange		Original		Rechange	
 Yellow / Subtitle		 Subt					
 TV / AV		 AV					
 Green / P/N		 Green					
 SAT		 Media					
 TV / Radio		 TV/R					
 EPG		 Guide					

 

 



 

 




 

 




Original	Rechange	Original	Rechange
 Power	 Power	 CH+	 Ch +
 Red	 Red	 CH-	 Ch -
 Green	 Green	 Up	 Up
 Yellow	 Yellow	 Down	 Down
 Blue	 Blue	 Right	 Right
 TV/SAT	 AV	 Left	 Left
 TV/Radio	 TV/R	 OK	 Ok
 Zoom	 Eject	 Vol+	 Vol +
 List	 List	 Vol-	 Vol -
 Audio	 Dual	 P+	 P+
 EPG	 Guide	 P-	 P-
 Timer	 Shift + AV	 Recall	 Pre Ch
 Text	 Text	 FAV	 Shift + Pre Ch
 Exit	 Exit	 1	 1
 Menu	 Menu	 2	 2
 M/P	 Media	 3	 3
 Mute	 Mute	 4	 4





Original		Rechange		Original		Rechange	
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Info		Info				
	Pause		Pause				

