 

 

 

 











 

 

 

 



 



 







 

 

 



 



 


 




 



 







Original	Recharge	Original	Recharge
 Power	 Power	 <<	 << / Tune-
 TV/Radio	 TV/Radio /	 >>	 >> / Tune+
 Red	 Red / Netflix / Search	 Auto	 Smart / List
 Green	 Green / APP / Repeat	 Stop	 Stop / Hold
 Yellow	 Yellow / YouTube / Repeat	 <<	 << / Preset-
 Blue	 Blue / Prime Video / Random	 >>	 >> / Preset+
 FAV	 Fav / Marker / PC	 Menu	 Menu / Home
 Text	 Text / Goto	 Up	 Up
 Hold	 Shift + Stop /	 Audio	 Audio / Lang I/II
 Index	 Info / Angle	 Left	 Left
 Subtitle	 Subtitle / EQ	 OK	 OK
 Size	 Zoom / Size	 Right	 Right
 Aspect	 Shift + Picture / Format	 Sleep	 Sleep / Timer
 Subpage	 Eject / Surround	 Down	 Down
 Media	 Shift + Display / Media	 Exit	 Exit / Cancel / Clear
 Play	 Play / Slow	 Vol+	 Vol+
 Pause	 Pause / Step / Freeze	 Mute	 Mute / Dimmer



