



Original	Recharge
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TV / Radio	TV/Radio /
0	0
←PR	Back / Return
EPG	Guide / EPG / -/--
Up / PR+	Up
Up / PR+	Shift + Up

Original	Recharge
Menu	Menu / Home
Left / Vol-	Shift + Left
Left / Vol-	Left
OK / List	OK
OK / List	Shift + OK
Right / Vol+	Shift + Right
Right / Vol+	Right
Info	Info / Angle
Down / PR-	Shift + Down
Down / PR-	Down
Exit	Exit / Cancel / Clear
Red / Audio	Shift + Red / Netflix /
Red / Audio	Red / Netflix / Search
Page+	CH+ / Page+
Yellow / Subtitle	Shift + Yellow / YouTube /
Yellow / Subtitle	Yellow / YouTube / Repeat
Page-	CH- / Page-



