



 


 
 


 
 




 
 
 


 





 











 




 





 


 





 

 

 

 

 

 



 



 




Original	Rechange	Original	Rechange
 Power	 Power	 Yellow	 Yellow
 1	 1	 Blue	 Blue
 2	 2	 Guide	 Guide
 3	 3	 Rec List	 List
 4	 4	 Source	 AV
 5	 5	 *	 Menu
 6	 6	 Back	 Back
 7	 7	 Home	 Smart
 8	 8	 Up	 Up
 9	 9	 Down	 Down
 0	 0	 Right	 Right
 [i+] / [?]	 Info	 Left	 Left
 [=]	 Text	 OK	 Ok
 Google Play	 Media	 Vol +	 Vol +
 Netflix	 Shift + Media	 Vol -	 Vol -
 Red	 Red	 Mute	 Mute
 Green	 Green	 Tv	 TV/R





Original		Recharge		Original		Recharge	
	Recall		Pre Ch				
	CH+		Ch +				
	CH-		Ch -				
	Audio		Dual				
	[...]		Subt				
	Help		Options				
	<<		<<				
	Play		Play				
	>>		>>				
	Rec		Rec				
	Pause		Pause				
	Exit		Exit				

