

 



 




 

 

 
 



 
 

 


 




 

 


Original	Recharge	Original	Recharge
On/Off	 Power	Volume+	 Vol +
Mute	 Mute	Chan.Up	 Ch +
Update	 Smart	Volume-	 Vol -
Info	 Info	Chan.Down	 Ch -
Subt.List	 Subt	1	 1
Return TV	 Back	2	 2
Text	 Text	3	 3
Txt Expand	 Eject	4	 4
Menu	 Menu	5	 5
Display	 Shift + Info	6	 6
Menu Up	 Up	7	 7
Menu Left	 Left	8	 8
TV/AV	 AV	9	 9
OK Enter	 Ok	Guide -/-- 1.	 Guide
Menu Right	 Right	0/10	 0
Menu Off	 Exit	2.Fav P/C 2.	 Pre Ch
Menu Down	 Down	Red	 Red



Original	Recharge	Original	Recharge
Green	 B	Green	
Yellow	 C	Yellow	
Blue	 D	Blue	

