



Original	Rechange
Power	Power
Open / Close	Eject / Surround
OSD	Display / Media
1	1
2	2
3	3
Subtitle	Subtitle / EQ
4	4
5	5
6	6
Angle	Info / Angle
7	7
8	8
9	9
Language	Audio / Lang I/II
R/L	Blue / Prime Video / Random
0	0

Original	Rechange
10+	Guide / EPG / -/--
Setup	Setup / OPT /
Mute	Mute / Dimmer
Clear	Exit / Cancel / Clear
Prog	TV/Radio /
Time	Sleep / Timer
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
Title	Sound / Title
Menu	Menu / Home
Default	AV / Input / RDS
<<	<< / Tune-
Play / Pause	Play / Slow
Play / Pause	Pause / Step / Freeze






















Original	Recharge	Original	Recharge
	I<<		I<< / Preset-
	>>		>> / Tune+
	Stop		Stop / Hold
	>>I		>>I / Preset+
	N/F		Red / Netflix / Search
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	zoom		Zoom / Size
	Mode		D.Menu / Top
	Step		Shift + Pause / Step /
	Slow		Shift + Play /
	Vol+		Vol+
	Resume		Smart / List
	PBC		Picture / Format
	Return		Back / Return
	Vol-		Vol-

Original	Recharge































 

Original	Rechange
On/Off	 Power
Audio Off	 Mute / Dimmer
Play	 Play / Slow
Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
Record	 Rec / Rec Mode
Rewind	 << / Tune-
F.Forward	 >> / Tune+
Prev.	 I<< / Preset-
Next	 >>I / Preset+
Title	 Sound / Title
Audio	 Audio / Lang I/II
Subt.	 Subtitle / EQ
Open/Close	 Eject / Surround
Auto/Track	 Picture / Format
Zoom	 Zoom / Size
Np	 Sleep / Timer

Original	Rechange
Progr.	 TV/Radio /
Top Menu	 D.Menu / Top
Setup	 Setup / OPT /
C/CH	 Text / Goto
DVD/TV	 AV / Input / RDS
Menu	 Menu / Home
Menu Up	 Up
Angle	 Info / Angle
Menu Left	 Left
OK Enter	 OK
Menu Right	 Right
Pbc	 Exit / Cancel / Clear
Menu Down	 Down
Return	 Back / Return
Volume+	 Vol+
Resume	 Smart / List
Slow Up	 CH+ / Page+












































Original	Recharge	
Volume-		Vol-
Display		Display / Media
Slow Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
+10		Guide / EPG / -/--
0		0
R/L		Fav / Marker / PC
Search		Red / Netflix / Search
Repeat/1/All		Green / APP / Repeat

Original	Recharge	
Rep/A-B		Yellow / YouTube / Repeat
Shuffle		Blue / Prime Video / Random
Karaoke/Step	 + 	Shift + Pause / Step /
Echo+	 + 	Shift + Up
Echo-	 + 	Shift + Down
3D	 + 	Shift + 3
Video	 + 	Shift + 4





Original	Rechange	Original	Rechange
On/Off	 Power	Progr.	 TV/Radio /
Audio Off	 Mute / Dimmer	Top Menu	 D.Menu / Top
Play	 Play / Slow	Setup	 Setup / OPT /
Pause	 Pause / Step / Freeze	Resume	 Text / Goto
Stop	 Stop / Hold	DVD/TV	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Angle	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Title	 Sound / Title	Menu Right	 Right
Lang	 Audio / Lang I/II	Clear/00:00	 Exit / Cancel / Clear
Subt.	 Subtitle / EQ	Menu Down	 Down
Open/Close	 Eject / Surround	Return	 Back / Return
Auto/Track	 Picture / Format	Volume+	 Vol+
Zoom	 Zoom / Size	Mode	 Smart / List
Pbc	Sleep / Timer	Slow Up	CH+ / Page+

Original	Rechange	Original	Rechange
On/Off	 Power	Progr.	 TV/Radio /
Audio Off	 Mute / Dimmer	Top Menu	 D.Menu / Top
Play	 Play / Slow	Setup	 Setup / OPT /
Pause	 Pause / Step / Freeze	Resume	 Text / Goto
Stop	 Stop / Hold	DVD/TV	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Angle	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Title	 Sound / Title	Menu Right	 Right
Lang	 Audio / Lang I/II	Clear/00:00	 Exit / Cancel / Clear
Subt.	 Subtitle / EQ	Menu Down	 Down
Open/Close	 Eject / Surround	Return	 Back / Return
Auto/Track	 Picture / Format	Volume+	 Vol+
Zoom	 Zoom / Size	Mode	 Smart / List
Pbc	Sleep / Timer	Slow Up	CH+ / Page+





Original	Recharge	Original	Recharge
Volume-	Vol-	Rep/A-B	Yellow / YouTube / Repeat
Display	Display / Media	R/L	Blue / Prime Video / Random
Slow Down	CH- / Page-		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
+10	Guide / EPG / -/--		
0	0		
C/CH	Fav / Marker / PC		
Np	Red / Netflix / Search		
Repeat/1/All	Green / APP / Repeat		

Original	Recharge	Original	Recharge
Rep/A-B	Yellow / YouTube / Repeat		
R/L	Blue / Prime Video / Random		

