





Original	Recharge
 Power	 Power
 Input	 AV / Input / RDS
 TV / TXT	 Shift + Text /
 Cancel	 Shift + Exit / Cancel / Clear
 Reveal	 Setup / OPT /
 Nicam/A2	 Shift + Sound / Title
 Hold	 Stop / Hold
 Size	 Shift + Zoom /
 Subpage	 Eject / Surround
 Index	 Smart / List
 Red / TV/Radio	 Red / Netflix / Search
 Red / TV/Radio	 TV/Radio /
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 CH+	 CH+ / Page+
 Vol+	 Vol+

Original	Recharge
 CH-	 CH- / Page-
 Vol-	 Vol-
 Menu	 Menu / Home
 Mute	 Mute / Dimmer
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 DVB	 D.Menu / Top
 Exit	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original	Recharge
	
	
	
	 Shift + Guide / EPG / -/--
	
	 Back / Return
	 Picture / Format
	 Sound / Title
	 Sleep / Timer
	 Subtitle / EQ
	 Audio / Lang I/II
	 Display / Media
	 Zoom / Size
	 Text / Goto
	 Guide / EPG / -/--
	 Fav / Marker / PC
	 Shift + CH+ /

Original	Recharge
	 Shift + CH- /

