


 





 
















 




 


 






 

 


 
 















 




Original		Rechange		Original		Rechange	
	Power		Power		P-		Ch -
	TV / DTV		Smart		AV		AV
	Guide		Guide		Mute		Mute
	Up		Up		Vol+		Vol +
	Left		Left		Vol-		Vol -
	OK		Ok		1		1
	Right		Right		2		2
	Down		Down		3		3
	Menu		Menu		4		4
	Back		Back		5		5
	Zoom		Eject		6		6
	O↔O		Shift +		7		7
	Red		Red		8		8
	Green		Green		9		9
	Yellow		Yellow		0		0
	Blue		Blue		( i )		Info
	P+		Ch +		[ ≡ ]		Text





Original	Recharge
 [=i]	 SHIFT + DISPLAY INFO Shift + Info
 [ ↑ ]	 ECO 3D 3D
 [ ? ]	 APP MEDIA Media
 [ □ ]	 Stop
 TVRADIO TV / Radio	 SEARCH TV/R TV/R
 CD/I/I I / II	 SOUND DUAL Dual
 [ ⊕ ]	 SHIFT + AD SUBT Shift + Subt
 [ ... ]	 AD SUBT Subt

Original	Recharge

