










 


 





 









 
 
 

 





 



















Original	Recharge	Original	Recharge
 Power	 Power	 Stop	 Stop
 Mute	 Mute	 Go to	 Smart
 Playmode	 3D	 Up	 Up
 1/Screen	 1	 Down	 Down
 2/SlideShow	 2	 Right	 Right
 3/Rotate	 3	 Left	 Left
 4/Audio	 4	 OK	 Ok
 5/Subtitle	 5	 >>	 >>
 6/Sync	 6	 <<	 <<
 7/Playlist	 7	 Play	 Play
 8/Add/Delete	 8	 Pause	 Pause
 9/List Edit	 9	 >>	 >>
 0/Zoom	 0	 <<	 <<
 Move	 Guide	 Vol+	 Vol +
 Scroll	 Pre Ch	 Vol-	 Vol -
 Skip+	 Ch +	 Red/Interval	 Red
 Skip-	 Ch -	 Blue/Setup	 Blue

Original	Recharge	Original	Recharge
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 TV	 DVD
 DISC NAV	 SOUND	 AD	 SETTINGS
 LIST	 DUAL	 SUBT	 OPT
 PROG	 SEARCH	 PICTURE	 ECO
 SLEEP	 TV/R	 FORMAT	 3D
 E-MANUAL	 REPEAT	 ZOOM	 TIMER
 D.MENU	 TEXT	 AV	
 TOP MENU	 MENU	 DISPLAY	 INFO
 CLEAR	 EXIT	 RETURN	 BACK
 VOL+	 HOME SMART	 CH+	 CH-
 VOL-	 APP	 MEDIA	
 1	 2	 3	
 4	 5	 6	
 7	 8	 9	
 FAV	 0	 PRE-CH	
 GUIDE	 A	 B	 C
 D			





	Original	Recharge	
Caption	Green/Caption	B	Green
Info	Yellow/Info	C	Yellow
Bookmark	Bookmark	APP MEDIA	Media
TV-Out	TV-Out	SEARCH TV/R	TV/R

Original	Recharge

