

 



 
 

 
 
 
 

 
 
 

 

 

 
 

 
 


 
 
 



 


 
 



 



 
 


 


 













 




 
 
 





 


 
 
 
 






Original		Rechange		Original		Rechange	
	Power		Power		1		1
	Pause/Slow		Pause		2		2
	Rec		Rec		3		3
	Index >>I		>>I		4		4
	I<< Index		I<<		5		5
	Search		TV/R		6		6
	Up		Up		7		7
	Play		Play		8		8
	Down		Down		9		9
	Stop		Stop		0		0
	Right		Right		-/--		Guide
	>>		>>		AV/Input Select	 + 	Shift + AV
	<<		<<		Tracking/V-Look+		Ch +
	Left		Left		Tracking/V-Look-		Ch -
	Menu		Menu		Vol+		Vol +
	Exit		Exit		Vol-		Vol -
	OK		Ok		Show View		Smart





Original	Rechange
 Prog/Check	 Sleep
 Cancel	 Back
 VPS/PDC	 Blue
 SP/LP	 Format
 Timer Rec	 3D
 AV Link	 Media
 Audio Out	 Red
 OSD/Display	 Info
 Reset	 Pre Ch
 Direct Tv Rec	 Shift + Rec
 Up	 List
 Red/Down	 D. Menu
 Date+	 Dual
 Green/Date-	 Text
 On+	 Subt
 Yellow/On-	 Eject
 Off+	 Options

Original	Rechange
 Blue/Off-	 AV





Original	Recharge
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	GUIDE
INPUT SELECT AV	TIMER AV
TV/TEXT	REPEAT TEXT
TRACKING/LOCK +	+ CH
TRACKING/LOCK -	CH -
Red	A

Original	Recharge
Green	B
Yellow	C
Blue	D

