





















 





 

 




Original	Rechange	Original	Rechange
Power ON/Off	 Power	Volume+	 Vol+
Mute	 Mute / Dimmer	Every Pop	 Smart / List
CD Play	 Play / Slow	Next/Prog+	 CH+ / Page+
CD Pause	 Pause / Step / Freeze	Volume-	 Vol-
Stop	 Stop / Hold	Display	 Display / Media
Tape 1 Rec	 Rec / Rec Mode	Prev./Prog-	 CH- / Page-
CD Rewind	 << / Tune-	Pr 1	 1
CD F.FWD	 >> / Tune+	Pr 2	 2
Tape 1 Preset	 I<< / Preset-	Pr 3	 3
Woofers/Speed	 Sound / Title	Pr 4	 4
Phono/Scan	 Picture / Format	Pr 5	 5
Sleep	 Sleep / Timer	Pr 6	 6
Program	 TV/Radio /	CD/Theater	 Red / Netflix / Search
Mode	 D.Menu / Top	Repeat	 Green / APP / Repeat
Band	 Setup / OPT /	Tape 1 Play	 Shift + Play /
Input/Source	 AV / Input / RDS	Preset Pause	 Shift + Pause / Step /
Funct./Direct	 Menu / Home	Tape 1 Stop	 Shift + Stop /

Hold



