








 









 

 



















Original	Rechange
 Power	 Power
 Display	 Display / Media
 Setup	 Setup / OPT /
 Mute	 Mute / Dimmer
 Menu	 Menu / Home
 Music	 Sound / Title
 Copy	 Fav / Marker / PC
 Zoom	 Zoom / Size
 TV System	 TV/Radio /
 Browser	 Info / Angle
 Vol-	 Vol-
 Vol+	 Vol+
 Guide	 Guide / EPG / -/-
 Return	 Back / Return
 Up	 Up
 Left	 Left
 Enter	 OK

Original	Rechange
 Right	 Right
 Down	 Down
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Time Shift	 Picture / Format
 0	 0
 Goto	 Text / Goto
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 Stop	 Stop / Hold





Original	Recharge	Original	Recharge
 Timer	 Sleep / Timer		
 Pause/Step	 Pause / Step / Freeze		
 I>/Slow	 Eject / Surround		
 I<<	 I<< / Preset-		
 Rec List	 Smart / List		
 ←/INS Replay	 CH- / Page-		
 →/CM Skip	 CH+ / Page+		
 >>I	 >>I / Preset+		
 A-B	 Yellow / YouTube / Repeat		
 Subtitle	 Subtitle / EQ		
 Repeat	 Green / APP / Repeat		
 <<	 << / Tune-		
 F1	 D.Menu / Top		
 Source	 AV / Input / RDS		
 Audio	 Audio / Lang I/II		
 >>	 >> / Tune+		

Original	Recharge

