










 

 
 
















 





 
Original	Recharge
 ON	 Power
 Standby	 Shift + Power
 Display	 Display / Media
 BD / DVD	 Shift + 2
 VCR / DVR	 Shift + 4
 CBL / SAT	 Shift + 0
 GAME	 Shift + 5
 PC	 Shift + Fav / Marker / PC
 AUX	 Shift + 7
 TUNER	 Shift + 6
 TV/CD	 Shift + 3
 TV/CD	 Shift + 1
 PHONO	 Shift + Guide / EPG / -/-
 PORT	 Fav / Marker / PC
 NET	 Shift + 9
 USB	 Shift + 8
 Muting	 Mute / Dimmer

Original	Recharge
 CH+	 CH+ / Page+
 Vol+	 Vol+
 CH-	 CH- / Page-
 Vol-	 Vol-
 SP Layout	 D.Menu / Top
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Enter	 OK
 Right	 Right
 Setup	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Home	 Smart / List
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-





Original	Recharge
 Play	 Play / Slow
 >>	 >> / Tune+
 Pause / Play Rev.	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Movie / TV	 Red / Netflix / Search
 Music	 Green / APP / Repeat
 Game	 Yellow / YouTube / Repeat
 Thx	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Recharge
 Dimmer	 Shift + Mute / Dimmer
 D.TUN	 Text / Goto
 0	 0
 Sleep	 Sleep / Timer









 

 


 
 































Original	Recharge
On	Power
Standby	Shift + Power
Display	Display / Media
BD / DVD	Shift + 2
VCR / DVR	Shift + 4
CBL / SAT	Shift + 0
GAME	Shift + 5
PC	Shift + Fav / Marker / PC
AUX	Shift + 7
TUNER	Shift + 6
TV/CD	Shift + 3
TV/CD	Shift + 1
PHONO	Shift + Guide / EPG / -/-
PORT	Fav / Marker / PC
NET	Shift + 9
USB	Shift + 8
Muting	Mute / Dimmer

Original	Recharge
CH+ / Album+	CH+ / Page+
Vol+	Vol+
CH- / Album-	CH- / Page-
Vol-	Vol-
Top Menu	D.Menu / Top
Up	Up
Menu	Menu / Home
Left / Playlist-	Left
Enter	OK
Right / Playlist+	Right
Setup	Setup / OPT /
Down	Down
Return	Back / Return
Home	Smart / List
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-





Original	Rechange
 Play	 Play / Slow
 >>	 >> / Tune+
 Pause / Play Rev.	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Search	 Red / Netflix / Search
 Repeat	 Green / APP / Repeat
 Random	 Blue / Prime Video / Random
 Play Mode	 Yellow / YouTube / Repeat
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Rechange
 --/-- +10	 Guide / EPG / --/--
 0	 0
 Sleep	 Sleep / Timer
 CLR	 Exit / Cancel / Clear







 


 

 

 





















 









Original	Recharge	Original	Recharge
 Power	 Power	 Vol+	 Vol+
 Display	 Display / Media	 CH-	 CH- / Page-
 BD / DVD	 Shift + 2	 Vol-	 Vol-
 VCR / DVR	 Shift + 4	 SP Layout	 D.Menu / Top
 CBL / SAT	 Shift + 0	 Up	 Up
 GAME	 Shift + 5	 Menu	 Menu / Home
 PC	 Shift + Fav / Marker / PC	 Left	 Left
 AUX	 Shift + 7	 Enter	 OK
 TUNER	 Shift + 6	 Right	 Right
 TV / CD	 Shift + 3	 Setup	 Setup / OPT /
 TV / CD	 Shift + 1	 Down	 Down
 PHONO	 Shift + Guide / EPG / --	 Return	 Back / Return
 PORT	 Fav / Marker / PC	 Home	 Shift + Menu /
 NET	 Shift + 9	 I<<	 I<< / Preset-
 USB	 Shift + 8	 >>I	 >>I / Preset+
 Muting	 Mute / Dimmer	 <<	 << / Tune-
 CH+	 CH+ / Page+	 Play	 Play / Slow

Original	Recharge	Original	Recharge
 Power	 Power	 Vol+	 Vol+
 Display	 Display / Media	 CH-	 CH- / Page-
 BD / DVD	 Shift + 2	 Vol-	 Vol-
 VCR / DVR	 Shift + 4	 SP Layout	 D.Menu / Top
 CBL / SAT	 Shift + 0	 Up	 Up
 GAME	 Shift + 5	 Menu	 Menu / Home
 PC	 Shift + Fav / Marker / PC	 Left	 Left
 AUX	 Shift + 7	 Enter	 OK
 TUNER	 Shift + 6	 Right	 Right
 TV / CD	 Shift + 3	 Setup	 Setup / OPT /
 TV / CD	 Shift + 1	 Down	 Down
 PHONO	 Shift + Guide / EPG / --	 Return	 Back / Return
 PORT	 Fav / Marker / PC	 Home	 Shift + Menu /
 NET	 Shift + 9	 I<<	 I<< / Preset-
 USB	 Shift + 8	 >>I	 >>I / Preset+
 Muting	 Mute / Dimmer	 <<	 << / Tune-
 CH+	 CH+ / Page+	 Play	 Play / Slow





Original	Recharge
	 >> / Tune+
	 Pause / Step / Freeze
	 Stop / Hold
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 +  Shift + Mute / Dimmer

Original	Recharge
	 Text / Goto
	 0
	 Sleep / Timer





Original	Recharge
Power	Power
Display	Display / Media
BD / DVD	Shift + 2
VCR / DVR	Shift + 4
CBL / SAT	Shift + 0
GAME	Shift + 5
PC	Shift + Fav / Marker / PC
AUX	Shift + 7
TUNER	Shift + 6
TV / CD	Shift + 3
TV / CD	Shift + 1
PHONO	Shift + Guide / EPG / -/-
PORT	Fav / Marker / PC
NET	Shift + 9
USB	Shift + 8
Muting	Mute / Dimmer
CH+	CH+ / Page+

Original	Recharge
Vol+	Vol+
CH-	CH- / Page-
Vol-	Vol-
SP Layout	D.Menu / Top
Up	Up
Menu	Menu / Home
Left	Left
Enter	OK
Right	Right
Setup	Setup / OPT /
Down	Down
Return	Back / Return
Home	Shift + Menu /
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-
Play	Play / Slow



