



Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 DTV/ATV	 Info / Angle
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Original	Rechange
 Vol+	 Vol+
 MTS	 Setup / OPT /
 CH+	 CH+ / Page+
 Vol-	 Vol-
 RecList	 Smart / List
 CH-	 CH- / Page-
 FAV/List	 Fav / Marker / PC
 Rec	 Rec / Rec Mode
 Freeze	 Pause / Step / Freeze
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down





Original	Recharge
Display	Display / Media
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
<<	<< / Tune-
Guide	Guide / EPG / -/--
Play	Play / Slow
Pause/TimeShift	Shift + Pause / Step /
>>Aspect	>> / Tune+
I<</Cancel	Shift + Exit / Cancel / Clear
I<</Cancel	I<< / Preset-
>>I/Sub.PG	>>I / Preset+
Stop/Index	Stop / Hold
Tv/Radio	TV/Radio /
Subtitle	Subtitle / EQ
Reveal	D.Menu / Top

Original	Recharge
Size	Zoom / Size
Hold	Shift + Stop /
Text	Text / Goto

