









 
 


 
 
 







 


 

 
 







 







 
 
 

 
 








 
 

 



 




Original		Rechange		Original		Rechange	
	Power		Power		Yellow		Yellow
	Mute		Mute		Blue		Blue
	1		1		i		Info
	2		2		Text		Text
	3		3		Up / P+		Up
	4		4		Up / P+		Ch +
	5		5		Down / P-		Down
	6		6		Down / P-		Ch -
	7		7		Right / Vol+		Vol +
	8		8		Right / Vol+		Right
	9		9		Left / Vol-		Vol -
	0 / AV		0		Left / Vol-		Left
	0 / AV		AV		Menu / OK		Menu
	Red / Zoom		Red		Menu / OK		Ok
	Red / Zoom		Eject		[[]]		Stop
	Green / Audio		Green		F.T/L		Smart
	Green / Audio		Dual		[?]		Media

 

 
 
 

 
 




 



 





 
 








	Original	Recharge		Original	Recharge
	[⇅]	+	Shift + Eject		
	[⊖]	 	Sleep		
	>	 	Pre Ch		
	[X]	 	Exit		
	[≡i]	 	Format		

















 



	Original	Recharge	Original	Recharge
	Power			
	Menu			
	OK			
	Up			
	Down			
	Right			
	Left			
	<<			
	Play			
	>>			
	Stop			
	Rec			
	↑			
	↓			







Original		Recharge		Original		Recharge	
	Power		Power				
	<<		<<				
	Play		Play				
	>>		>>				
	Rec		Rec				
	Stop		Stop				
	Up		Up				
	Down		Down				

