













 









 

















 












 
 



 



 







Original	Recharge	Original	Recharge
 Power	 Power	 Mute	 Mute / Dimmer
 1	 1	 I<<	 I<< / Preset-
 2	 2	 >>I	 >>I / Preset+
 3	 3	 <<	 << / Tune-
 4	 4	 >>	 >> / Tune+
 5	 5	 Stop	 Stop / Hold
 6	 6	 Pause	 Pause / Step / Freeze
 7	 7	 Play	 Play / Slow
 8	 8	 Info	 Info / Angle
 9	 9	 Exit	 Exit / Cancel / Clear
 0	 0	 Media Center	 Display / Media
 P+	 CH+ / Page+	 Up	 Up
 P-	 CH- / Page-	 Home Menu	 Menu / Home
 Vol+	 Vol+	 Pop-Up Menu	 D.Menu / Top
 Vol-	 Vol-	 Down	 Down
 Open/Close	 Eject / Surround	 Left	 Left
 Guide	 Guide / EPG / -/-	 Right	 Right





Original	Rechange
	OK
	Setup / OPT /
	Back / Return
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Rec / Rec Mode
	Text / Goto
	Subtitle / EQ
	TV/Radio /
	Sleep / Timer
	Smart / List
	Shift + Display / Media
	Sound / Title
	Picture / Format
	Audio / Lang I/II

Original	Rechange
	Canal Play Fav / Marker / PC
	Viera CAST AV / Input / RDS
	Power Tv Shift + Power
	Vol+Tv Shift + Vol+
	Vol-Tv Shift + Vol-
	P+Tv Shift + CH+ /
	P-Tv Shift + CH- /
	Av Tv Shift + AV / Input / RDS

