



 










 


 

 







 







 







 




 








 

 



 







Original		Rechange		Original		Rechange	
	Standby/On		Power		Left		Left
	Open/Close		Eject / Surround		Enter		OK
	1		1		Right		Right
	2		2		Home Menu		Shift + Menu /
	3		3		Home Menu		Smart / List
	4		4		Down		Down
	5		5		Return		Back / Return
	6		6		Play		Play / Slow
	7		7		Stop		Stop / Hold
	8		8		<</< /<		<< / Tune-
	9		9		Pause		Pause / Step / Freeze
	0		0		>/ />>>		>> / Tune+
	Clear		Exit / Cancel / Clear		<<		<< / Preset-
	DVD/USB		Shift + 2		Zoom		Zoom / Size
	Top Menu		D.Menu / Top		>>		>> / Preset+
	Menu		Menu / Home		Audio		Audio / Lang I/II
	Up		Up		Subtitle		Subtitle / EQ



