



Original	Rechange
Standby / On	Power
Open/Close / Eject	Eject
Mute	Mute
Speaker	Red
Test	Green
Sound Mode	Yellow
Sound Mode	Shift + Dual
Sound Effect	Blue
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9

Original	Rechange
0	0
Angle	Format
Zoom / ATR.	Shift + Eject
Repeat / Mode	Text
Step	Pause
Prog/Trk+	Ch +
Prog/Trk-	Ch -
Vol+	Vol +
Vol-	Vol -
DVD	Shift + 1
VCR	Shift + 2
FM/AM	Shift + 3
INPUT	AV
INPUT	Shift + 4
I<< / <<	I<<
Stop	Stop
Play/Pause	Play



