





 

 

 



 

 







Original		Rechange		Original		Rechange	
	Standby		Power				
	Phono		2				
	CD		3				
	Tuner		6				
	AUX 1		4				
	AUX 2		7				
	Tape		5				
	Vol+		Vol+				
	DCC		1				
	Vol-		Vol-				

