



 

































 

 





 





 



















Original	Rechange	Original	Rechange
 On	 Power	 Muting	 Mute / Dimmer
 Standby	 Shift + Power	 Level Down	 CH- / Page-
 Sleep	 Sleep / Timer	 Level Up	 CH+ / Page+
 Return	 Back / Return	 I<<	 I<< / Preset-
 Setup	 Setup / OPT /	 Play	 Play / Slow
 Disc+	 Shift + CH+ /	 >>I	 >>I / Preset+
 Up	 Up	 <<	 << / Tune-
 Vol+	 Vol+	 Stop	 Stop / Hold
 Disc-	 Shift + CH- /	 >>	 >> / Tune+
 Left	 Left	 Rec / Random	 Rec / Rec Mode
 Enter	 OK	 Pause / Play Rev.	 Pause / Step / Freeze
 Right	 Right	 Open / Close	 Shift + Eject / Surround
 Vol-	 Vol-	 Input Sel. DVD	 2
 Down	 Down	 Input Sel. CD	 3
 Audio	 Audio / Lang I/II	 Input Sel. V1	 1
 CH Sel	 Smart / List	 Input Sel. V2	 4
 Test	 Text / Goto	 Input Sel. T1	 5





Original	Rechange
T2 Input Sel. T2	8 8
V3 Input Sel. V3	7 7
V4 Input Sel. V4	9 9
TUN Input Sel. TUN	6 6
PH Input Sel. PH	0 0
1 Stereo	SOUND Sound / Title
2 Direct	NETFLIX Red / Netflix / SEARCH Search
3 DSP ►	SHIFT + ► Shift + Right
4 SURR	SURROUND Eject / Surround
5 A.ST	APP Green / APP / Repeat
6 ◄ DSP	SHIFT + ◄ Shift + Left
7 SP A	YouTube Yellow / YouTube / REPEAT A-B Repeat
8 SP B	Prime Video Blue / Prime Video / RANDOM Random
9 Re-EQ	EQ Subtitle / EQ
DISPLAY +10	MEDIA Display / Media
DIMMER 0	SHIFT + DIMMER MUTE Shift + Mute / Dimmer
ZONE 2 SEARCH-ENTER	RDS AV / Input / RDS

Original	Rechange





Original	Rechange
ON	Power
STDBY	Shift + Power
Return	Back / Return
Setup	Setup / OPT /
Disc+	CH+ / Page+
Up	Up
Vol+	Vol+
Disc-	CH- / Page-
Left	Left
Enter	OK
Right	Right
Vol-	Vol-
Down	Down
Top Menu	D.Menu / Top
Menu	Menu / Home
Muting	Mute / Dimmer
Angle	Info / Angle

Original	Rechange
Subtitle	Subtitle / EQ
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
>>	>> / Tune+
Random	Blue / Prime Video / Random
Pause	Pause / Step / Freeze
Open / Close	Eject / Surround
1	1
2	2
3	3
4	4
5	5
6	6
7	7













 













 

 

Original	Recharge
ON	Power
STDBY	Shift + Power
Disc+	CH+ / Page+
Vol+	Vol+
Vol-	Vol-
Muting	Mute / Dimmer
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
>>	>> / Tune+
Random	Blue / Prime Video / Random
Pause	Pause / Step / Freeze
Open / Close	Eject / Surround
1	1
2	2

Original	Recharge
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10	Guide / EPG / -/-
0	0





Original	Recharge
 ON	 Power
 STDBY	 Shift + Power
 Vol+	 Vol+
 Enter	 OK
 Enter	 Fav / Marker / PC
 Vol-	 Vol-
 Muting	 Mute / Dimmer
 I<<	 I<< / Preset-
 Play	 Play / Slow
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Rec / Random	 Rec / Rec Mode
 Rec / Random	 Blue / Prime Video / Random
 Pause	 Pause / Step / Freeze
 Open / Close	 Eject / Surround

Original	Recharge
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10	 Guide / EPG / -/--
 0	 0

