












 



 


















 


 
 

 
 


 
 
 

 
 
 

 



 
 

 











 



 



Original		Rechange		Original		Rechange	
	Power On		Power		I<<		I<<
	Power/Standby		Shift + Power		Play		Play
	Sleep		Sleep		>>I		>>I
	Display/DVD		Media		<<		<<
	OSD Menu		Menu		Stop		Stop
	CH+		Ch +		>>		>>
	CH-		Ch -		Rec		Rec
	Vol+		Vol +		Pause		Pause
	Vol-		Vol -		Eject		Eject
	Up		Up		DVD		Options
	Left		Left		CD		Text
	Enter		Ok		T1		Format
	Right		Right		T2		Dual
	Down		Down		Tun		AV
	Exit/Return		Exit		PH		3D
	Test/Tv/VCR		TV/R		V1		Red
	Muting		Mute		V2		Green







Original	Recharge	Original	Recharge
 Power	 Power	 1	 1
 Display DVD	 Media	 2	 2
 OSD Menu	 Menu	 3	 3
 Up	 Up	 4	 4
 Left	 Left	 5	 5
 Enter	 Ok	 6	 6
 Right	 Right	 7	 7
 Down	 Down	 8	 8
 Exit/Return	 Exit	 9	 9
 I<<	 I<<	 0	 0
 Play	 Play	 +10	 Guide
 >>I	 >>I	 Ent	 Pre Ch
 <<	 <<		
 Stop	 Stop		
 >>	 >>		
 Pause	 Pause		
 Eject	 Eject		
















 

 



 

 




 








Original		Rechange		Original		Rechange	
	Play		Play		8		8
	Stop		Stop		9		9
	Pause		Pause		+10		Guide
	I<<		I<<		0		0
	>>		>>				
	Track		Smart				
	Disc		Media				
	>>I		>>I				
	Eject		Eject				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				





Original		Rechange		Original		Rechange	
	Power		Power		8		8
	I<<		I<<		9		9
	Play		Play		+10		Guide
	>>I		>>I		Ent		Pre Ch
	<<		<<				
	Stop		Stop				
	>>		>>				
	Rec		Rec				
	Pause		Pause				
	Eject		Eject				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				

