


 

 















 

 





 


 





Original	Rechange
 Power	 Power
 Mute	 Mute
 Display	 Info
 QV	 Options
 Picture	 Shift + Format
 Sound	 Shift + Dual
 Source	 AV
 EPG	 Guide
 FAV +	 >>
 FAV -	 <<
 FAV	 Pre Ch
 Menu	 Menu
 Size	 Format
 I/II / Top	 Dual
 Exit	 Exit
 Vol -	 Vol -
 Vol +	 Vol +

Original	Rechange
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 CH -	 Ch -
 CH +	 Ch +
 Red / USB Left	 Red
 Red / USB Left	 Shift + Left
 Green / USB	 Green
 Green / USB	 Shift + Down
 Yellow / USB Up	 Yellow
 Yellow / USB Up	 Shift + Up
 Blue / USB Right	 Blue
 Blue / USB Right	 Shift + Right
 1	 1
 2	 2




 


 
 

 
 

 
 




 
 
 


 

 
 







 



Original	Rechange	Original	Rechange
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Sleep		Sleep
	10+		Shift + Guide
	USB/CR / Text		Media
	USB/CR / Text		Text
	Play/Pause / Index		Play
	Play/Pause / Index		Shift + Info
	Play/Pause / Index		Pause
	Stop / Cancel		Stop
	Stop / Cancel		Shift + Exit

Original	Rechange
	SUBTL Subt
	Prog / Mix Smart
	Prog / Mix SHIFT + PROG SLEEP Shift + Sleep
	Return / SUBPG RETURN BACK Back
	Repeat / Reveal SHIFT + REPEAT TEXT Shift + Text
	Search / Hold SEARCH TVR TV/R





Original	Rechange	Original	Rechange
	 Power		 9
	 AV		 0
	 Exit		 Guide
	 Menu		 Up
	 Dual		 Right
	 Media		 Ok
	 Options		 Left
	 Text		 Down
	 TV/R		 Subt
	 1		 Pause
	 2		 Rec
	 3		 <<
	 6		 Play
	 5		 >>
	 4		 Shift + Media
	 7		 Shift + Dual
	 8		 Shift + 6

