
 
 



 
 

 
 

 



 



 
 


 

 


 
 




 
 


 










 






Original	Recharge	Original	Recharge
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Smart	Menu Off	 Exit
Reveal	 Media	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 Info	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Menu audio	 Dual
Return TV	 TV/R	Volume-	 Vol -
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Shift + Info	6	 6
Menu Left	 Left	7	 7



Original	Recharge	Original	Recharge
8	 8		
9	 9		
Guide -/-- 1.	 GUIDE		
0/10	 0		
2.Fav P/C 2.	 PRE-CH		
Red	 A		
Green	 B		
Yellow	 C		
Tone+	 OPT		
Blue	 D		
Audio+	 3D		
On Pip	 SHIFT +  1 Shift + 1		
Swap	 SHIFT +  2 Shift + 2		
Rotate Pip	 SHIFT +  3 Shift + 3		
Still	 SHIFT +  4 Shift + 4		
Dim Pip	 SHIFT +  5 Shift + 5		

