




 





 

 



 

 























 


 
 


 
 


 
 

 

 

 




 





Original		Rechange		Original		Rechange	
	Power		Power		4		4
	Mute		Mute		5		5
	TV / AV		AV		6		6
	Menu		Menu		7		7
	Sleep		Sleep		8		8
	Up / PR+		Up		9		9
	Up / PR+		Ch +		0		0
	Down / PR-		Down		APC		I<<
	Down / PR-		Ch -		ASC		<<
	Right / Vol+		Right		ARC		>>
	Right / Vol+		Vol +		PIP		Smart
	Left / Vol-		Left		Review		Info
	Left / Vol-		Vol -		MTS		Dual
	OK		Ok		Multi PIP		Format
	1		1		Multimedia		Media
	2		2		Red / PIP CH+		Red
	3		3		Green / PIP CH-		Green





Original		Recharge		Original		Recharge	
	Yellow / PIP SWAP		Yellow				
	Blue / PIP Input		Blue				
	Text		Text				
	Mode		Options				
	Size / PIP Size		Eject				
	Mix		TV/R				
	Sub Page		Subt				
	Index		Shift + Info				
	Reveal		D. Menu				
	Hold / PIP Still		Stop				
	Update / PIP Position		Guide				

