
 
 

 

 

 
 
 

 

 

 




Original	Rechange
	Mute / Dimmer
	Power
	TV/Radio /
	Shift + 2
	Shift + TV/Radio / Program
	Shift + Rec / Rec Mode
	Shift + Yellow / YouTube /
	Audio / Lang I/II
	1
	2
	3
	4
	5
	6
	7
	8
	9

Original	Rechange
	0
	Guide / EPG / -/-
	Smart / List
	Picture / Format
	Text / Goto
	Menu / Home
	Exit / Cancel / Clear
	Info / Angle
	Vol+
	Up
	CH+ / Page+
	Left
	OK
	Right
	Vol-
	Down
	CH- / Page-






 

 

 
 
 
 
 
 
 
 
 


Original	Recharge	Original	Recharge
C-SET Red/C-Set	NETFLIX SEARCH Red / Netflix / Search		
SV Green/SV	APP REPEAT Green / APP / Repeat		
ZOOM Yellow/Zoom	YouTube REPEAT A-B Yellow / YouTube / Repeat		
MARKER Blue/Marker	Prime Video RANDOM Blue / Prime Video / Random		
TUNE- <<	TUNE- << / Tune-		
Play	SLOW Play / Slow		
TUNE+ >>	TUNE+ >> / Tune+		
Rec	REC MODE Rec / Rec Mode		
Rec	SHIFT + HOLD Shift + Stop /		
Pause	STEP-FREEZE Pause / Step / Freeze		
Stop	HOLD Stop / Hold		





 









 


 


 

 



Original	Rechange
	Mute / Dimmer
	Power
	TV/Radio /
	Shift + 2
	Shift + TV/Radio / Program
	Shift + Rec / Rec Mode
	Shift + Yellow / YouTube / REPEAT A-B
	Audio / Lang I/II
	1
	2
	3
	4
	5
	6
	7
	8
	9

Original	Rechange
	0
	Guide / EPG / -/-
	Smart / List
	Picture / Format
	Text / Goto
	Menu / Home
	Exit / Cancel / Clear
	Info / Angle
	Vol+
	Up
	CH+ / Page+
	Left
	OK
	Right
	Vol-
	Down
	CH- / Page-








 


 
 














Original	Recharge	Original	Recharge
 Red/C-Set	 Red / Netflix / Search		
 Green/SV	 Green / APP / Repeat		
 Yellow/Zoom	 Yellow / YouTube / Repeat		
 Blue/Marker	 Blue / Prime Video / Random		
 <<	 << / Tune-		
 Play	 Play / Slow		
 >>	 >> / Tune+		
 Rec	 Shift + Stop /		
 Rec	 Rec / Rec Mode		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		



 















 

 

 



Original	Rechange
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Rec / Rec Mode
	 << / Tune-
	 >> / Tune+
	 Audio / Lang I/II
	 Picture / Format
	 TV/Radio /
	 Text / Goto
	 Menu / Home
	 Up
	 Info / Angle
	 Left
	 OK

Original	Rechange
	 Right
	 Exit / Cancel / Clear
	 Down
	 Vol+
	 Smart / List
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9





























 
 
































Original	Recharge	Original	Recharge
 EPG/DVD-AV	 Guide / EPG / -/--		
 0/AV	 0		
 Red/C-Set	 Red / Netflix / Search		
 Green/SV	 Green / APP / Repeat		
 Yellow/Zoom	 Yellow / YouTube / Repeat		
 Blue/Marker	 Blue / Prime Video / Random		
 Rec	 Shift + Stop /		
 Rec Menu	 Shift + Rec / Rec Mode		
 Radio	 Shift + TV/Radio / Program		
 DVD	 Shift + 2		
 [- ]-/←AB	 Shift + Yellow / YouTube /		

Original	Recharge





Original	Recharge	Original	Recharge
Power		Power	
Mute		Mute / Dimmer	
Play		Play / Slow	
Pause		Pause / Step / Freeze	
Stop		Stop / Hold	
Rec		Rec / Rec Mode	
<<		<< / Tune-	
>>		>> / Tune+	
Audio		Audio / Lang I/II	
PIP		Picture / Format	
TV		TV/Radio /	
Text/Disc-M		Text / Goto	
Menu		Menu / Home	
Up		Up	
Info		Info / Angle	
Left		Left	
OK		OK	

Original	Recharge	Original	Recharge
Right		Right	
End		Exit / Cancel / Clear	
Down		Down	
Vol+		Vol+	
Assist/Card		Smart / List	
P+		CH+ / Page+	
Vol-		Vol-	
P-		CH- / Page-	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	





Original	Recharge
EPG/DVD-AV	 Guide / EPG / -/--
0/AV	 0
Red/C-Set	 Red / Netflix / Search
Green/SV	 Green / APP / Repeat
Yellow/Zoom	 Yellow / YouTube / Repeat
Blue/Marker	 Blue / Prime Video / Random
Rec	 Shift +  Stop /
Rec Menu	 Shift +  Rec / Rec Mode
Radio	 Shift +  TV/Radio / Program
DVD	 Shift +  2
- [ ] / ← AB	 Shift +  Yellow / YouTube /

Original	Recharge

