
 
 

 





 












 


 
 

 

 













 



 


Original	Rechange
 Power	 Power
 Tv/AV	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Lock	 Stop
 -/--	 Guide
 Mute	 Mute
 Sleep	 Sleep
 Recall	 Pre Ch

Original	Rechange
 S-Mode	 Dual
 P-Mode	 Format
 Call	 Back
 CH+	 Ch +
 CH-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 TXT/Tv	 Text
 Mix/Calendar	 Options
 Subp/Sound	 Subt
 Hold/Game	 Media
 Reveal	 TV/R





Original	Rechange	Original	Rechange
 Index	 Info		
 Cancel	 Exit		
 Size	 3D		
 Red	 Red		
 Green	 Green		
 Yellow/Timer	 Yellow		
 Cyan	 Blue		

