
 
 

 





 












 


 
 

 

 






| Original   | Rechange   |
|--|--|
|  Power    |  Power    |
|  Tv/AV    |  AV       |
|  1        |  1        |
|  2        |  2        |
|  3        |  3        |
|  4        |  4        |
|  5        |  5        |
|  6        |  6        |
|  7        |  7        |
|  8        |  8        |
|  9      |  9      |
|  0      |  0      |
|  Lock   |  Stop   |
|  -/--   |  Guide  |
|  Mute   |  Mute   |
|  Sleep  |  Sleep  |
|  Recall |  Pre Ch |

| Original   | Rechange  |
|--|---|
|  S-Mode         |  Dual      |
|  P-Mode         |  Format    |
|  Call           |  Back      |
|  CH+            |  Ch +      |
|  CH-            |  Ch -      |
|  Up             |  Up        |
|  Down           |  Down      |
|  Right          |  Right     |
|  Left           |  Left      |
|  Vol+           |  Vol +     |
|  Vol-         |  Vol -   |
|  Menu         |  Menu    |
|  TXT/Tv       |  Text    |
|  Mix/Calendar |  Options |
|  Subp/Sound   |  Subt    |
|  Hold/Game    |  Media   |
|  Reveal       |  TV/R    |



