

 

 


 









| Original   | Recharge  |
|--|---|
|  Power          |  Power         |
|  HDD            |  Shift + Media |
|  DVD            |  Media         |
|  1              |  1             |
|  2              |  2             |
|  3              |  3             |
|  4              |  4             |
|  5              |  5             |
|  6              |  6             |
|  7             |  7            |
|  8            |  8           |
|  9            |  9           |
|  0            |  0           |
|  -/--         |  Guide       |
|  Cancel       |  Exit        |
|  AV           |  AV          |
|  Input Select |  Eject       |

| Original  | Recharge  |
|---|---|
|  Direct Tv Rec                 |  TV/R      |
|  ShowView                      |  3D        |
|  CH+                           |  Ch +      |
|  CH-                           |  Ch -      |
|  Vol+                          |  Vol +     |
|  Vol-                          |  Vol -     |
|  I<< Skip                      |  I<<       |
|  Skip >>I                      |  >>I       |
|  << Slow/Search                |  <<        |
|  Slow/Search >>               |  >>       |
|  Pause                       |  Pause   |
|  Stop                        |  Stop    |
|  Play                        |  Play    |
|  Menu / Play List            |  Menu    |
|  Top Menu / Direct Navigator |  D. Menu |
|  Functions                   |  Options |
|  Return                      |  Back    |





