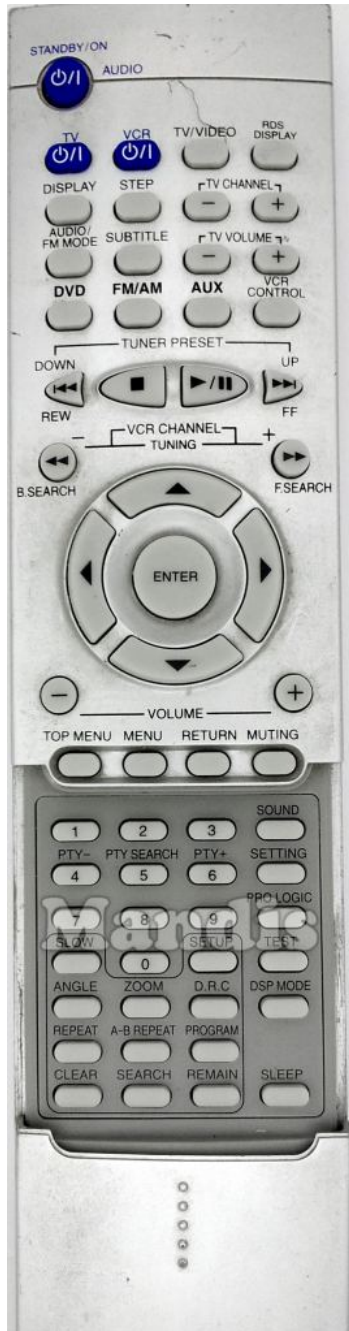


Original	Recharge
Standby/On Audio	Power
Power Tv	Shift + Power
Power VCR	Smart
Tv/Video	TV/R
RDS Display	Shift + Info
Display	Info
Step	Pre Ch
Tv Channel+	Ch +
Tv Channel-	Ch -
Tv Vol+	Shift + Vol +
Tv Vol-	Shift + Vol -
Subtitle	Subt
Audio/FM Mode	Dual
DVD	Blue
FM/AM	Green
AUX	Red
I<</Tuner Preset Down	I<<

Original	Recharge
Stop	Stop
Play	Play
Pause	Pause
>>I/Tuner Preset	>>I
<</Tuning-	<<
>>/Tuning+	>>
Up	Up
Down	Down
Right	Right
Left	Left
Enter	Ok
Top Menu	Shift + Menu
Menu	Menu
Return	Back
Vol+	Vol +
Vol-	Vol -
Muting	Mute

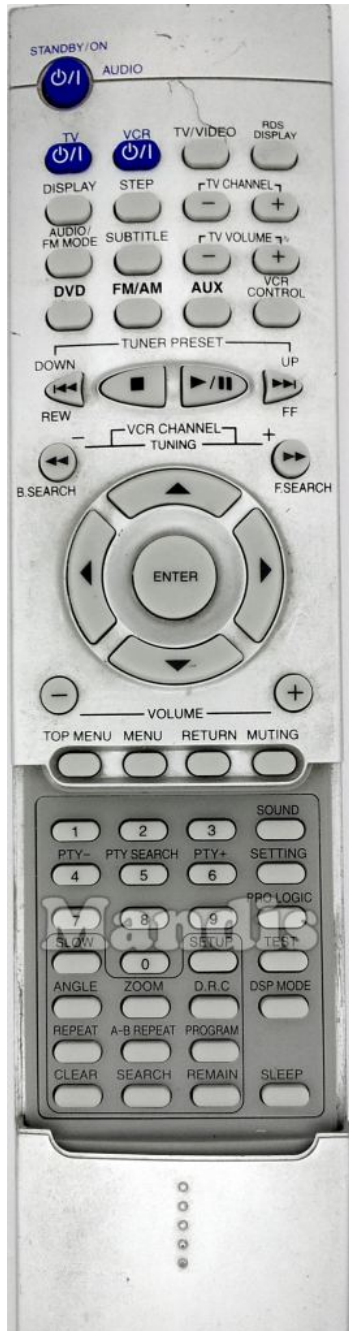





 




 
Original	Rechange
1	1
2	2
3	3
4/PTY-	4
5/PTY Search	5
6/PTY+	6
7	8
8	7
9	9
0	0
SLOW	TIMER AV
SETUP	E-MANUAL D.MENU
SOUND	SHIFT + SOUND DUAL
SETTING	SETTINGS OPT
PRO LOGIC	ECO 3D
TEST	REPEAT TEXT
DSP MODE	DISC NAV LIST

Original	Rechange
D.R.C	D.R.C.
ZOOM	Zoom
ANGLE	Angle
REPEAT	Repeat
A-B REPEAT	A-B Repeat
PROGRAM	Program
CLEAR	Clear
REMAIN	Remain
SLEEP	Sleep
SEARCH	Search
	SHIFT + MEDIA
	SHIFT + TEXT
	SHIFT + TIMER AV
	SHIFT + PROG SLEEP
	CLEAR EXIT
	GUIDE
	PROG SLEEP
	SHIFT + SEARCH TV/R
	Media
	Eject
	Format
	Shift + Text
	Shift + AV
	Shift + Sleep
	Exit
	Guide
	Sleep
	Shift + TV/R





Original	Rechange
 Power VCR	 Power
 Step	 Pre Ch
 DVD	 Blue
 FM/AM	 Green
 AUX	 Red
 I<<	 I<<
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 >>I	 >>I
 Tv/Video	 TV/R
 VCR Channel-	 Ch -
 VCR Channel+	 Ch +
 1	 1
 2	 2
 3	 3
 4	 4

Original	Rechange
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

