



 



 


 
 

 






 

 

 

 
 



 

 
 
 
 
 
 






Original		Rechange		Original		Rechange	
	Power		Power		<< Slow/Search		<<
	NTSC/PAL		Format		Slow/Search >>		>>
	Open/Close		Eject		Stop		Stop
	1		1		Still/Pause		Pause
	2		2		Play		Play
	3		3		Menu		Menu
	4		4		Title		TV/R
	5		5		Display		Info
	6		6		Return		Back
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	+10		Guide		Select		Ok
	Clear		Exit		Subtitle		Subt
	I<< Skip		I<<		Audio		Dual
	Skip >>I		>>I		Angle		Red





Original		Rechange	
	Prog/Direct		Sleep
	Call		Pre Ch
	Set Up		Options
	Repeat		Text
	A-B Repeat		AV
	Random		3D

Original		Rechange	

