










 

 
 
 



 

 

 

 

 

 
 
 

 


 

 
 





Original	Rechange
 Power	 Power
 Input	 AV
 Tv/Radio	 TV/R
 Sync Menu	 Menu
 Exit	 Exit
 1	 1
 2	 2
 3	 3
 5	 5
 4	 4
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [i+]/[?]	 Info
 [=]	 Text

Original	Rechange
 Netflix	 Media
 Google-Play	 Shift + Media
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Action Menu	 D. Menu
 Guide	 Guide
 Home	 Smart
 Discover	 Options
 Back	 Back
 TV	 3D
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Original		Recharge		Original		Recharge	
	Vol+		Vol +		Help		Format
	Vol-		Vol -		Title List		List
	Prog+		Ch +				
	Prog-		Ch -				
	Digital/Analog		Sleep				
	Mute		Mute				
	Recall		Pre Ch				
	Audio		Dual				
	<<		<<				
	Play		Play				
	>>		>>				
	1<<		1<<				
	Pause		Pause				
	>>1		>>1				
	Rec		Rec				
	Stop		Stop				
	[...]		Subt				

