










 

 
 
 



 

 

 

 

 

 
 
 

 



 

 

 

 

 

 

 



 



 
 

 
 



 




 

 
 

 
 
 








 

 
 


 
 
 





 
 


 
 








Original	Rechange	Original	Rechange
 Power	 Power	 Netflix	 Media
 Input	 AV	 Google-Play	 Shift + Media
 Tv/Radio	 TV/R	 Red	 Red
 Sync Menu	 Menu	 Green	 Green
 Exit	 Exit	 Yellow	 Yellow
 1	 1	 Blue	 Blue
 2	 2	 Action Menu	 D. Menu
 3	 3	 Guide	 Guide
 5	 5	 Home	 Smart
 4	 4	 Discover	 Options
 6	 6	 Back	 Back
 7	 7	 TV	 3D
 8	 8	 OK	 Ok
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 [i+]/[?]	 Info	 Right	 Right
 [=]	 Text	 Left	 Left

Original	Rechange	Original	Rechange
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 TV	 DVD	 DVD
 SAT	 SAT	 AUX	 AUX
 PLAY MODE	 PLAY MODE	 REC MODE	 REC MODE
 ▶	 ▶	 ⏸	 ⏸
 ■	 ■	 ⏩	 ⏩
 ⏮	 ⏮	 SOUND	 SOUND
 ◀	 ◀	 AD	 AD
 ▶	 ▶	 SETTINGS	 SETTINGS
 LIST	 LIST	 DUAL	 DUAL
 SUBT	 SUBT	 OPT	 OPT
 PROG	 PROG	 PICTURE	 PICTURE
 SLEEP	 SLEEP	 ECO	 ECO
 TV/R	 TV/R	 3D	 3D
 E-MANUAL	 E-MANUAL	 FORMAT	 FORMAT
 D.MENU	 D.MENU	 TIMER	 TIMER
 TOP MENU	 TOP MENU	 DISPLAY INFO	 DISPLAY INFO
 MENU	 MENU	 OK	 OK
 CLEAR	 CLEAR	 RETURN	 RETURN
 EXIT	 EXIT	 BACK	 BACK
 HOME	 HOME	 SMART	 SMART
 +	 +	 +	 +
 -	 -	 -	 -
 1	 1	 2	 2
 2	 2	 3	 3
 3	 3	 4	 4
 4	 4	 5	 5
 5	 5	 6	 6
 6	 6	 7	 7
 7	 7	 8	 8
 8	 8	 9	 9
 9	 9	 0	 0
 0	 0	 FAV	 FAV
 A	 A	 PRE-CH	 PRE-CH
 B	 B	 A	 A
C	C	B	B
D	D	C	C
Mandis SHOP	Mandis SHOP	Mandis SHOP	Mandis SHOP
www.mandis.tv	www.mandis.tv	www.mandis.tv	www.mandis.tv





Original		Recharge		Original		Recharge	
	Vol+		Vol +		Help		Format
	Vol-		Vol -		Title List		List
	Prog+		Ch +				
	Prog-		Ch -				
	Digital/Analog		Sleep				
	Mute		Mute				
	Recall		Pre Ch				
	Audio		Dual				
	<<		<<				
	Play		Play				
	>>		>>				
	I<<		I<<				
	Pause		Pause				
	>>I		>>I				
	Rec		Rec				
	Stop		Stop				
	[...]		Subt				

