



Original	Recharge
Power Audio	Power
Tv Input	AV
Power Source	Shift + Power
Menu	Menu
Info	Info
Exit	Exit
Guide	Guide
OK / Enter	Ok
OK/Enter	Shift + Ok
Up	Up
Down	Down
Right	Right
Left	Left
CH+	Ch +
CH-	Ch -
Vol+	Vol +
Vol-	Vol -

Original	Recharge
Mute	Mute
Back	Back
DVR	Smart
(+)	Media
System	Options
Play	Play
Pause	Pause
<<	<<
>>	>>
Stop	Stop
>	>>
<	<<
1	1
2	2
3	3
4	4
5	5





Original	Rechange
6	6
7	7
8	8
9	9
0	0
--	FAV PRE-CH Pre Ch
[↔]	ECO 3D 3D
≡	REPEAT TEXT Text
Red	A Red
Green	B Green
Yellow	C Yellow
Blue	D Blue
↑	AD SUBT Subt
↓	PICTURE FORMAT Format
CBL-SAT	SHIFT + 1 Shift + 1
BD-DVD	SHIFT + 2 Shift + 2
Game	SHIFT + 3 Shift + 3

Original	Rechange
TV	SHIFT + 4 Shift + 4
Bluetooth	SHIFT + 5 Shift + 5
AUX	SHIFT + 6 Shift + 6
Rec	REC MODE Rec
CC	E-MANUAL D.MENU D. Menu

