



Original		Recharge		Original		Recharge	
	Power		Power		Recall		Back
	Mute		Mute		Vol+		Vol +
	1		1		Vol-		Vol -
	2		2		EPG		Guide
	3		3		P+		Ch +
	4		4		P-		Ch -
	5		5		Red		Red
	6		6		Green		Green
	7		7		Yellow		Yellow
	8		8		Blue		Blue
	9		9		Menu		Menu
	0		0		Menu		Menu
	Photo/Video/Music		Options		Back		Pre Ch
	Internet		Smart		i		Info
	Text		Text		Exit		Exit
	Subt.		Subt		Up		Up
	Audio		Dual		Down		Down
					Right		Right





	Original	Rechange	Original	Rechange
	Left			
	OK			
	Rec			
	Play			
	Pause			
	Stop			
	<<			
	FAV	+		Shift + Pre Ch
	>>			

