



 





 







 


 


 
 






 

 


















 

 
 
 
 




 
 









 




 



















 








	Original	Rechange		Original	Rechange
	Power		Power		7
	[+]		Info		8
	Tv/AV		AV		9
	Mute		Mute		0
	^		Ch +		-/--
	v		Ch -		Timer
	Vol+		Vol +		N
	Vol-		Vol -		Menu
	V		Ok		Mood Light
	V+		Right		Red
	V-		Left		Green
	1		1		Yellow
	2		2		Blue
	3		3		Power VCR
	4		4		Audio Out VCR
	5		5		^ VCR
	6		6		v VCR
					7
					8
					9
					0
					Guide
					Shift + AV
					Media
					Menu
					Format
					Red
					Green
					Yellow
					Blue
					Shift + Power
					Dual
					Up
					Down





Original		Recharge		Original		Recharge	
	Stop		Stop		[≡⇅]		Exit
	Pause		Pause		[:..]		Subt
	>		Back				
	<<		<<				
	Play		Play				
	>>		>>				
	Rec		Rec				
	Tv/TXT		Text				
	F.P.		Pre Ch				
	[/≡]		Options				
	[≡ <]		Eject				
	[≡?]		TV/R				
	[≡◇]		3D				
	[≡i]		List				
	[≡+]		D. Menu				
	[≡o]		Smart				
	[≡x]		Sleep				

