




























 








Original	Rechange	Original	Rechange
Power		Power	
Recall		Back / Return	
CC		Subtitle / EQ	
Text		Text / Goto	
Smart		Smart / List	
Sleep		Sleep / Timer	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	
Reset		Exit / Cancel / Clear	

Original	Rechange	Original	Rechange
CH / Guide		Guide / EPG / -/--	
Up		Up	
M		Menu / Home	
A / CH		Info / Angle	
Down		Down	
Vol+		Vol+	
Vol-		Vol-	
Left / -		Left	
Right / +		Right	
Mute		Mute / Dimmer	
CH+		CH+ / Page+	
CH-		CH- / Page-	
A		Red / Netflix / Search	
B		Green / APP / Repeat	
C		Yellow / YouTube / Repeat	
D		Blue / Prime Video / Random	
G		Shift + Yellow / YouTube / Repeat	





Original

Rechange


















Clock	SHIFT + SLEEP	Shift + Sleep / Timer
E	SHIFT + NETFLIX	Shift + Red / Netflix /
F	SHIFT + APP	Shift + Green / APP /
A / V	RDS AV INPUT	AV / Input / RDS

















 
Original

Rechange





Original	Rechange	Original	Rechange
Power		Power	
Recall		Back / Return	
CC		Subtitle / EQ	
Text		Text / Goto	
Smart		Smart / List	
Sleep		Sleep / Timer	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	
Reset		Exit / Cancel / Clear	


 





Original	Rechange	Original	Rechange
Up		Up	
CH / Guide		Guide / EPG / -/--	
Down		Down	
M		Menu / Home	
Vol+		Vol+	
A / CH		Info / Angle	
Vol-		Vol-	
Mute		Mute / Dimmer	
Left / -		Left	
Right / +		Right	
CH+		CH+ / Page+	
CH-		CH- / Page-	
A		Red / Netflix / Search	
B		Green / APP / Repeat	
C		Yellow / YouTube / Repeat	
D		Blue / Prime Video / Random	
Clock		Shift + Sleep / Timer	





Original

Rechange


















E	 + 	Shift + Red / Netflix /
F	 + 	Shift + Green / APP /
G	 + 	Shift + Yellow / YouTube /
A / V		AV / Input / RDS













 




Original

Rechange





Original	Rechange	Original	Rechange
Power		Power	
Recall		Back / Return	
CC		Subtitle / EQ	
Text		Text / Goto	
Smart		Smart / List	
Sleep		Sleep / Timer	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	
Reset		Exit / Cancel / Clear	

Original	Rechange	Original	Rechange
CH / Guide		Guide / EPG / -/--	
Up		Up	
Down		Down	
A / CH		Info / Angle	
M		Menu / Home	
Right / +		Right	
Left / -		Left	
Vol+		Vol+	
Vol-		Vol-	
Mute		Mute / Dimmer	
CH+		CH+ / Page+	
CH-		CH- / Page-	
A		Red / Netflix / Search	
B		Green / APP / Repeat	
C		Yellow / YouTube / Repeat	
D		Blue / Prime Video / Random	
E		Shift + Red / Netflix / Search	





Original	Recharge	Original	Recharge
F	 +  Shift + Green / APP /		
G	 +  Shift + Yellow / YouTube /		
Clock	 +  Shift + Sleep / Timer		
A / V	 AV / Input / RDS		

