




 
 

 



 
 

 

 



 



 




 







 



 





Original	Recharge
 Power	 Power
 Home	 Smart
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Back	 Back
 Menu	 Menu
 i	 Info
 <<	 <<
 >>	 >>
 Play / Pause	 Play
 Play / Pause	 Pause
 I<<	 I<<
 >>I	 >>I
 Stop	 Stop

Original	Recharge
 Volume+ Volume	 Vol +
 Volume- Volume	 Vol -
 Mute	 Mute
 Zoom+ Zoom	 Ch +
 Zoom- Zoom	 Ch -

