



Original	Rechange
Standby	Power
Open / Close	Eject
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Goto	Guide
Add / Clear	Exit
<<<	<<<
>>>	>>>
Pause	Pause

Original	Rechange
Play	Play
Stop	Stop
I<<<	I<<<
>>>I	>>>I
Up	Up
Left	Left
Enter	Ok
Right	Right
Down	Down
Setup	Options
Navigat	Smart
Title	List
Menu	Menu
Subtitle	Subt
Angle	Format
Source	AV
Rec	Rec





Original	Recharge		
TIMER	Timer	SHIFT + TIMER AV	Shift + AV
EDIT	Edit	APP MEDIA	Media
USB	USB	A	Red
DVD	DVD	B	Green
HDD	HDD	C	Yellow
DISC OPER	Disc Oper	E-MANUAL D.MENU	D. Menu
SLOW	Slow	SHIFT + PAUSE	Shift + Pause
RETURN	Return	RETURN BACK	Back
REPEAT	Repeat	REPEAT TEXT	Text
ZOOM	Zoom	SHIFT + ZOOM	Shift + Eject
CH+	CH+	+ CH	Ch +
CH-	CH-	CH -	Ch -
P/N	P/N	SEARCH TV/R	TV/R
AUDIO	Audio	SOUND DUAL	Dual
DV	DV	+ VOL	Vol +
L/P	L/P	DISPLAY INFO	Info
MUTE	Mute	MUTE	Mute

Original	Recharge		
TV	TV	VOL -	Vol -
TV	TV	D	Blue

