

 
 


 











 
 
 


 
 


 
 





 

 
 

 

 

 

 

 
 
 





 




 
 

 
 







 
 




Original	Recharge	Original	Recharge
	Power		Power
	Ambilight		3D
	Menu		Menu
	Smart/Colors		Smart
	Sources/Pair		AV
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	←		Back
	Home		Shift + Smart
	+		Pre Ch
	<<		<<
	Play		Play
	>>		>>
	Stop		Stop
	Pause		Pause
	Rec		Rec
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Netflix		Media
	Windows		Shift + Media
	Rakuten Tv		TV/R
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	TV/Exit		Exit
	1		1
	2		2





Original	Recharge
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Text	 Text
 Tv Guide/List	 Guide

Original	Recharge

