

 
 
 

 

 


 
 






 

 

 



 
 
 
 
 




 




 









 







 



 



 




 



 







 







 




Original	Recharge	Original	Recharge
	Power		Power
	Source		AV
	[<>]/[+]		Format
	I-II/[≡≡]		Dual
	[*]		Subt
	O		TV/R
	Red/TV		Red
	Green/PC		Green
	Yellow/Radio		Yellow
	Blue/[]		Blue
	Active Control		Options
	[≡]		Text
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu		Menu
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Smart		Smart
	[] Smart		Media
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9







 















 


Original	Rechange
 Power	 Power
 >>I	 >>I
 Rec	 Rec
 I<<	 I<<
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Menu	 Menu
 P+	 Ch +
 P-	 Ch -
 1	 1
 2	 2

Original	Rechange
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 P<P	 Pre Ch
 [i+]	 Info





Original	Recharge
 Power	 Power
 >>I	 >>I
 I<<	 I<<
 Pause	 Pause
 Active Control	 Options
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Menu	 Menu
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 Vol-	 Vol -
 Vol+	 Vol +
 1	 1

Original	Recharge
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 P<P	 Pre Ch

