


 





 





 



 
 
















 

 









 




 



 
 

 



 








Original		Rechange		Original		Rechange	
	Power		Power		1		1
	Source		AV		2		2
	You Tube		Media		3		3
	Netflix		Shift + Smart		4		4
	F Pay		Shift + Media		5		5
	Rec		Rec		6		6
	Play		Play		7		7
	Pause		Pause		8		8
	Stop		Stop		9		9
	Lang		Dual		0		0
	<<		<<		TV		TV/R
	>>		>>		Recall		Pre Ch
	[≡]...		Subt		Menu		Menu
	Red		Red		Internet		Smart
	Green		Green		Q.Menu		D. Menu
	Yellow		Yellow		Vol+		Vol +
	Blue		Blue		Vol-		Vol -





Original		Rechange		Original	Rechange
	P+		Ch +		
	P-		Ch -		
	Up		Up		
	Down		Down		
	Right		Right		
	Left		Left		
	OK		Ok		
	Exit		Exit		
	Back		Back		
	[-o-]		Format		
[*] button icon" data-bbox="228 571 261 604"/>	[*]		Options		
	i		Info		
	Mute		Mute		
	*/O		3D		
	Music/Movie/Pictu		List		
	[≡]		Text		
	Guide		Guide		

