

 

 

 
 

 



 





 



 


 
 

 
 
 

 



 


 




 










	Original	Rechange	Original	Rechange
	 Power	 Power	 Up	 Up
	 Open/Close	 Eject	 Subtitle	 Subt
	 Repeat	 Text	 Down	 Down
	 Disc Menu	 D. Menu	 Left	 Left
	 Video Sel	 AV	 Audio	 Dual
	 >>	 >>	 Right	 Right
	 USB	 Media	 Tools	 Options
	 Marker	 Pre Ch	 Enter	 Ok
	 <<	 <<	 Title Menu	 Smart
	 Repeat A-B	 TV/R		
	 Play/Pause	 Play		
	 Stop	 Stop		
	 >>	 >>		
	 <<	 <<		
	 Menu	 Menu		
	 Return	 Back		
	 Info	 Info		

