

 







 

 

 


 






 


 

























 


























Original	Recharge	Original	Recharge
 Power	 Power	 0	 0
 Open / Close	 Exit	 10+	 Guide
 Mute	 Mute	 Program	 Sleep
 OSD	 Info	 Setup	 Options
 Subtitle	 Subt	 Menu	 Menu
 Audio	 Dual	 Up	 Up
 Angle	 Format	 Left	 Left
 Search	 TV/R	 Right	 Right
 1	 1	 Down	 Down
 2	 2	 Select	 Ok
 3	 3	 Stop	 Stop
 4	 4	 <<	 <<
 5	 5	 >>	 >>
 6	 6	 Step	 Shift + Pause
 7	 7	 Zoom	 Eject
 8	 8	 Play	 Play
 9	 9	 Slow	 Shift + Play





Original		Rechange		Original		Rechange	
	Pause		Pause				
	I<<		I<<				
	>>I		>>I				
	Vol+		Vol +				
	A-B		D. Menu				
	Resume		Smart				
	Digest		Media				
	3D		3D				
	Repeat		Text				
	Return		Back				
	L-R		AV				
	Vol-		Vol -				

