 

 





 



 

 

 



 



 



 
 
 
 
 









 


























 





 



 







 





Original	Recharge	Original	Recharge
 Power	 Power	 Rec	 Rec / Rec Mode
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 Red	 Red / Netflix / Search	 Up	 Up
 Green	 Green / APP / Repeat	 Exit	 Exit / Cancel / Clear
 Yellow	 Yellow / YouTube / Repeat	 Left	 Left
 Blue	 Blue / Prime Video / Random	 OK	 OK
 Zoom	 Zoom / Size	 Right	 Right
 SUB	 Subtitle / EQ	 EPG	 Guide / EPG / -/-
 Timeshift	 Shift + Sleep / Timer	 Down	 Down
 USB	 Shift + 8	 Info	 Info / Angle
 TV/Radio	 TV/Radio /	 I<< / Preset-	 I<< / Preset-
 TXT	 Text / Goto	 Audio	 Audio / Lang I/II
 PVRList	 Smart / List	 << / Tune-	 << / Tune-
 Sleep	 Sleep / Timer	 >>I / Preset+	 >>I / Preset+
 Play	 Play / Slow	 SAT	 Shift + 0
 Pause	 Pause / Step / Freeze	 >> / Tune+	 >> / Tune+
 Stop	 Stop / Hold	 1	 1





Original	Recharge	Original	Recharge
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 FAV	 Fav / Marker / PC		
 0	 0		
 Recall	 Back / Return		

