 

 









 

 

 
 
 

 

 









 



 

 
 




Original		Rechange		Original		Rechange	
	Standby / On		Power		Size		Eject
	Vol+		Vol +		P.Mode		Format
	Vol-		Vol -		Return		Back
	RGB		1				
	HDMI		2				
	Mute		Mute				
	Standby		Ch -				
	On		Ch +				
	Menu		Menu				
	Up		Up				
	Left		Left				
	OK		Ok				
	Right		Right				
	Down		Down				
	Recall		Pre Ch				
	Input		AV				
	Auto		Media				

