


 
 



 

 

 




 

















Original		Rechange		Original		Rechange	
	Power		Power		Recall		Back / Return
	Mute		Mute / Dimmer		Red		Red / Netflix / Search
	P.Mode		Picture / Format		Green		Green / APP / Repeat
	S.Mode		Sound / Title		Yellow		Yellow / YouTube / Repeat
	Sleep		Sleep / Timer		Blue		Blue / Prime Video / Random
	Audio		Audio / Lang I/II		Menu		Menu / Home
	1		1		Up		Up
	2		2		Source		AV / Input / RDS
	3		3		Left		Left
	4		4		OK / Enter		OK
	5		5		Right		Right
	6		6		Exit		Exit / Cancel / Clear
	7		7		Down		Down
	8		8		Info		Info / Angle
	9		9		CH+		CH+ / Page+
	Freeze		Pause / Step / Freeze		Home		Shift + Menu /
	0		0		Vol+		Vol+



