
 
 


 




 
 





 
 
 


 

 

 
 

 
 


 
 


 


 


 



 


 

 
 



 

 

 

 
 
 
 


 
Original	Recharge	Original	Recharge
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Slow Down	 Ch -	Return	 Back
Stop	 Stop	Menu Down	 Down
Pause	 Pause	Volume+	 Vol +
Auto/Track	 Red	Progr.	 Sleep
Slow Up	 Ch +	Next	 >>
Subt.	 Subt	Volume-	 Vol -
Rep/A-B	 +  Shift + Text	Top Menu	 D. Menu
Title	 List	Prev.	 <<
DVD/TV	 Media	1	 1
Repeat/1/All	 Text	2	 2
Zoom	 +  Shift + Eject	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 +  Shift + Info	6	 6
Menu Left	 Left	7	 7




 
 


 

 
 






 


 

 



 


 




 



Original	Recharge	
8		8
9		9
Store		Green
Digest		Yellow
Random	 + 	Shift + Format
Play		Play
Game		Blue
+10		Guide
Np	 + 	Shift + List
Remain		Exit
Karaoke/Step	 + 	Shift + >>
Shuffle	 + 	Shift + TV/R
0		0
C/CH		Pre Ch
Record		Rec
Video		Options
Rewind		<<

Original	Recharge	
ON/Off	 + 	Shift + Power
Mode		Smart
Key-	 + 	Shift + Left
Input Source		AV
3D		3D
F.Forward		>>
Play/Back	 + 	Shift + Play
Timer	 + 	Shift + AV
Open/Close		Eject
Resume	 + 	Shift + Pause
Audio	 + 	Shift + Dual
Key+	 + 	Shift + Right
Vocal/Assist	 + 	Shift + Vol +
Search		TV/R
Tone	 + 	Shift + Vol -
Info		Info
Angle		Format



Original	Recharge	Original	Recharge
Lang	 Dual		



Original	Rechange	Original	Rechange
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Slow Down	 Ch -	Progr.	 Sleep
Subt.	 Subt	Return	 Back
Auto/Track	 Red	Menu Down	 Down
Slow Up	 Ch +	Top Menu	 D. Menu
Rep/A-B	 +  Shift + Text	Volume+	 Vol +
Title	 List	Volume-	 Vol -
Stop	 Stop	1	 1
Pause	 Pause	2	 2
Repeat/1/All	 Text	Next	 >>
Zoom	 Eject	3	 3
DVD/TV	 AV	4	 4
Menu	 Menu	Prev.	 <<
Menu Up	 Up	5	 5
Display	 +  Shift + Info	6	 6
Menu Left	 Left	7	 7



Original	Recharge	Original	Recharge
Rewind		<<	
Play		Play	
Record		Rec	
Np		Green	
Angle		Format	
Video		Smart	
Remain		Blue	
Pbc		Yellow	
Syst.Preset		Media	
F.Forward		>>	
Setup		Options	
Timer		Shift + AV	
3D		3D	
Play/Back		Shift + Play	
Shuffle		Shift + TV/R	
Lang		Dual	
Random		Shift + Format	
8		8	
Audio		Shift + Dual	
Info		Info	
9		9	
+10		Guide	
0		0	
C/CH		Pre Ch	
ON/Off		Shift + Power	
Key-		Shift + Left	
Auto Scan		Shift + Ok	
Key+		Shift + Right	
Echo+		Shift + Ch +	
Echo-		Shift + Ch -	
Digest		Shift + Guide	

