

















 









 











 



Original		Rechange		Original		Rechange	
FM/AM	FM/AM	PROGRAM TV/RADIO	TV/Radio /	8	8	USB 8	8
TAPE	Tape <>	SHIFT + TAPE 5	Shift + 5	9	9	BLUETOOTH 9	9
CD	Play/Pause CD	SLOW	Play / Slow	0	0	HDMI - SAT 0	0
MD	Play/Pause MD	SHIFT + SLOW	Shift + Play /	+10	+10	GUIDE EPG	Guide / EPG / -/-
AUX	AUX	SHIFT + AUX - HDD 7	Shift + 7	+100	+100	SHIFT + HDMI - SAT 0	Shift + 0
RDS	RDS	SHIFT + RDS AV INPUT	Shift + AV / Input / RDS	CLOCK	Clock	SHIFT + GOTO TEXT	Shift + Text /
PTY	PTY	TOP MENU D.MENU	D.Menu / Top	TIMER	Timer	SHIFT + SLEEP	Shift + Sleep / Timer
CT	CT	FORMAT PICTURE	Picture / Format	SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
RT	RT	YouTube REPEAT A-B	Yellow / YouTube / Repeat	SET	Set	OPT-TOOLS SETUP	Setup / OPT /
FM MODE	FM Mode	SHIFT + PROGRAM TV/RADIO	Shift + TV/Radio / Program	MD REC	MD Rec	SHIFT + REC MODE	Shift + Rec / Rec Mode
1	1	TV 1	1	PICK REC	Pick Rec	REC MODE	Rec / Rec Mode
2	2	DVD 2	2	CHECK SPACE	Check/Space	SIZE ZOOM	Zoom / Size
3	3	CD - STB 3	3	CLEAR DEL	Clear/Del	CLEAR EXIT CANCEL	Exit / Cancel / Clear
4	4	VIDEO 4	4	ENTER	Enter	OK	OK
5	5	TAPE 5	5	REC MUTE	Rec Mute	SHIFT + DIMMER MUTE	Shift + Mute / Dimmer
6	6	TUNER 6	6	REV MODE	Rev Mode	SHIFT + TUNE-	Shift + << /
7	7	AUX - HDD 7	7	DOLBY NR	Dolby NR	LANG I/II AUDIO	Audio / Lang I/II





Original	Rechange
 5 Mode SRS	 Smart / List
 Edit	 Text / Goto
 Edit Cancel	 Shift + Exit / Cancel / Clear
 Title Input	 AV / Input / RDS
 Title Search	 Red / Netflix / Search
 Repeat	 Green / APP / Repeat
 Random	 Blue / Prime Video / Random
 Prog/Chara	 Info / Angle
 Vol-	 Vol-
 Vol+	 Vol+
 Power	 Power
 Mute	 Mute / Dimmer
 Bass	 Sound / Title
 EQ Mode	 Fav / Marker / PC
 >>	 >> / Tune+
 Time Display	 Display / Media
 I<<	 I<< / Preset-

Original	Rechange
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 <<	 << / Tune-

