








 










 
 

 

 





 



 




















 
 
 













 




Original		Recharge		Original		Recharge	
	Power STB		Power		Rec		Rec
	96		Options		Folder		Media
	Music		Dual		<<		<<
	1		1		>>		>>
	2		2		Stop		Stop
	3		3		Play / Pause		Play
	4		4		Play / Pause		Pause
	5		5		Menu		Menu
	6		6		Back		Back
	7		7		Mute		Mute
	8		8		Vol+		Vol +
	9		9		Vol-		Vol -
	0		0		CH+		Ch +
	Text		Text		CH-		Ch -
	Search		TV/R		Up		Up
	I<<		I<<		Left		Left
	>>I		>>I		OK		Ok





Original		Rechange		Original		Rechange	
	Right		Right				
	Down		Down				
	VOD		Smart				
	Guide		Guide				
	Info		Info				
	Exit		Exit				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

